



IS 972 LX





electronic controllers for “forced air”
refrigerating units

This family consist of a main unit called IS and an expansion module called EWEM, connected together with a telephone cable.

USER INTERFACE

The user has a display and four keys for controlling status and programming of the instrument.

KEYS AND MENUS

UP key		Scrolls through the menu items Increases the values Activates manual def. function (see parameter H31)
DOWN key		Scrolls through the menu items Decreases the values Programmable by parameter (see parameter H32)
fnc key		ESC function (exit) Programmable by parameter (see parameter H33)
set key		Accesses the setpoint Accesses the menus Confirms the commands Displaying the alarms (if present)

At start-up the instrument performs a Lamp Test; for few seconds the display and the leds blink, in order to verify their integrity and correct operation. The instrument has two main menus: the “Machine Status” and “Programming” menu.

ACCESSING AND USING MENUS

Resources are arranged in a menu, which can be accessed by pressing and quickly releasing the “set” key (“Machine Status” menu) or by holding down the “set” key for more than 5 seconds (“Programming” menu).

To access the contents of each folder, indicated by the relevant label, just press the “set” key once.

You can now scroll through the contents of each folder, modify it or use its functions. If you do not use the keyboard for over 15 seconds (time-out) or if you press the “fnc” key once, the last value shown

on the display is confirmed and you return to the previous screen mask.

MACHINE STATUS MENU (See Machine Status Menu Diagram)

To access the “Machine Status” menu Press and quickly release the “set” key. If alarms are not present, the label “SEt” appears. By using the “UP” and “DOWN” keys you can scroll through the other folders in the menu:

- AL: alarm folder (if alarms present, except for faulty probe(s)/probe(s) error(s);
- Pb1: probe 1 value folder;
- Pb2: probe 2 value folder
- SEt: Setpoint setting folder.

Set Setting

Access the “Machine Status” menu by pressing and quickly releasing the “set” key. The label of the “SEt” folder appears.

To display the Setpoint value press the “set” key again.

The value appears on the display.

To change the Setpoint value, use the “UP” and “DOWN” keys within 15 seconds.

If the parameter is LOC = y the Setpoint cannot be changed.

Alarm on

If alarm condition exists, when accessing The “Machine Status” menu the “AL” folder label appears (see the “Diagnostics” section).

Displaying Probes

By pressing the “set” key when the appropriate label appears, the value of the probe associated to it is displayed.

PROGRAMMING MENU (See Programming Menu Diagram)

1) Level 1 Parameters

To access the “Programming” menu, press the “set” key for more than 5 seconds. If specified, the level 1 access PASSWORD will be requested (see parameter “PA1”) and (if the password is correct) the label of the first folder will follow. If the password is wrong, the display will show the PA1 label again.

To scroll other folders, use the “UP” and “DOWN” keys; **the folders contain only the level 1 parameters.**

NOTE: At this point level 2 parameters are NOT visible, even if they aren’t protected by password.

2) Level 2 Parameters

In the Programming Menu go into the “CnF” folder, scroll all the parameter until you reach the PA2 label. By pressing and releasing the “set” button you will enter to level 2 parameters and the label of the first folder in the programming menu will follow.

The level 2 parameters may be protected by a second password (see “PA2” parameter inside “diS” folder, not to be confused with PA2 label inside “CnF” folder.

If specified, level 2 parameters are hidden to user; accessing the “CnF” folder the level 2 access PASSWORD will be requested and (if the correct password is entered) the label of the first folder in the programming menu will follow.

NOTE: At this point you will see only level 2 parameters.

Level 1 parameters will NOT be visible; to reach them you shall exit the Programming Menu and re-entry the Programming Menu section (see step 1). To enter the folder, press “set”. The label of the first visible parameter appears. To scroll through the other parameters, use the “UP” and “DOWN” keys; to change the parameter, press and release “set”, then set the desired value using the “UP” and “DOWN” keys, and confirm with the “set” key. Move to the next parameter.





PLEASE NOTE: It is suggested to switch-off and switch-on again the instrument everytime it is changed the configuration of the parameters: this prevents malfunctioning on regulation and delay time occurring.

PASSWORD

The passwords “PA1” and “PA2” allow access respectively to level 1 and level 2 parameters. In the standard configuration passwords are not present. To enable them (value ≠ 0) and assign them the desired value, access the “Programming” menu, within the folder with the “diS” label. If passwords are enabled, they will be requested:

- PA1 at the entrance of the “Programming” menu (see the “Programming Menu” section);
- PA2 within the folder with the “CnF” label containing level 1 parameters.

LED

Position	Related Function	Status
	Compressor or relay 1	ON when the compressor is started up; blinking in case of delay, protection or blocked enabling
	Defrost	ON when defrosting; blinking in case of manual enabling
	Alarm	ON when the alarm is enabled; blinking when the alarm is silenced
	Fans	ON when the fan is working

MANUAL ACTIVATION OF THE DEFROSTING CYCLE

To manually activate the defrosting cycle, press the "UP" key for 5 seconds. If defrosting conditions are not present, (for example the evaporator probe temperature is higher than defrost stop temperature or if parameter OdO≠0), the display will blink three (3) times, in order to indicate that the operation will not be performed.

COPY CARD

The Copy Card is an accessory connected to the TTL serial port which allows programming quickly the instrument parameters (upload and download parameter's map). The operation is performed as follows:

Format

This command allows copy card formatting, an operation necessary in case of first use or to copy maps with different models.

Warning: if the copy card has been programmed, using the "Fr" the data entered are erased. This operation cannot be cancelled.

Upload

This operation loads the programming parameters from the instrument.

Download

This operation downloads to the instrument the programming parameters.

NOTE:

- **UPLOAD: instrument --> Copy Card**
- **DOWNLOAD: Copy Card --> instrument.**

The operations are performed accessing the folder identified by the "FPr" label and selecting, according to the case, "UL", "dL" or "Fr" commands; the operation is confirmed by pressing the "set" key. If the operation is successful an "y" is displayed, on the contrary, if it fails a "n" will be displayed.

Download "from reset (instrument OFF"

Connect the copy card with the instrument OFF (not under voltage).

When the instrument is switched on the programming parameters will be downloaded into the instrument; after the lamp-test the display will show for about 5 seconds:

- label dLY if copy operation successful
- label DLn if not

PLEASE NOTE:

- after the download operation the instrument will immediately work with the new parameters map setting.

TELEVIS SYSTEM

The link with the TelevisSystem can go through the serial port TTL(the BUS ADAPTER 100 series TTL RS-485 interface module must be used).

In order to configure the instrument for this purpose you must access the folder identified by the "Add" label and use the parameters "dEA" and "FAA".

KEYBOARD LOCKING

The instrument includes a facility for disabling the keyboard, by programming the "Loc" parameter (see folder with "diS" label). If the keyboard is locked, you can still access the programming menu by pressing the "set" key. The Setpoint can also be viewed.

DIAGNOSTICS

The alarm condition is always signalled by the buzzer (if present) and by the led of

the alarm icon (🔊)

The alarm signal produced by a faulty thermostat probe (referred to probe 1) is shown as E1 on the instrument display. The alarm signal produced by a faulty evaporator probe (probe 2) is shown as E2 on the instrument display.

Error table

DISPLAY	ERROR
E1	Thermostat probe fault
E2	Evaporator probe fault
If simultaneous they will appear on display with 2 seconds alternation	

The error condition of the probe 1 (thermostat) causes the following:

- the code E1 is displayed
- the compressor is activated as indicated by the "On" and "Off" parameters if programmed for the duty cycle or:

Ont	Oft	Compressor output
0	0	OFF
0	>0	OFF
>0	0	ON
>0	>0	dc

The error condition of the probe 2 (evaporator) causes the following:

- viewing E2 code on the display
- end of defrost because of time-out

Other signalling alarm are not shown on the instrument display, but from the "Machine Status" menu within the "AL" folder.

MINIMUM AND MAXIMUM TEMPERATURE ALARMS

Regulation of the minimum and maximum temperature alarms refers to the thermostat probe.

The temperature limits defined by the "HAL" (maximum temperature alarm) and "LAL" parameters (minimum temperature alarm) are in absolute temperature value. When an alarm status occurs, if no alarm exclusion phases are underway (see alarm exclusion parameters), the alarm set icon is lit up and the buzzer, and/or the relay configured as an alarm, is activated. The occurrence of this alarm does not in any-way effect the control activities in progress. This alarm status can be viewed in the "AL" folder with AH1-AL1 labels.

DEFROST ALARM

If defrost ends because of a time-out (instead that because of a defrost end temperature detected by the defrosting probe), an alarm is generated and the icon is turned on consequently. This condition can be viewed in the "AL" folder with the label "Ad2". Automatic back swing occurs when the next defrost starts. By pressing any key during the alarm condition, the signal light disappears. In order to really erase the alarm you must wait the next defrost.

EXTERNAL ALARM

The device includes the possibility to control an external alarm, from a digital input. If the digital input is active, the alarm control is activated, if programmed, and stays until the next time the digital input is deactivated. The alarm is signaled by turning on the fixed alarm icon, by activating the relay configured as alarm, and by deactivating compressor, defrost and fan controls (if specified by the "EAL" parameter). This alarm condition can be viewed in the "AL" folder with the label "EA". The relay can be silenced; even if alarm icon starts blinking, controls stay locked until the next time the digital input is deactivated.

OPEN DOOR ALARM

In case of an open door, in response to delay defined by tdO parameter the Open Door alarm is signaled. The alarm is signaled by turning on the blinking alarm icon. This alarm condition can be viewed in the "AL" folder with the label "Opd".

DISPLAY	ALARM
AH1	High temperature alarm (referred to the thermostat probe or probe 1)
AL1	Low temperature alarm (referred to the thermostat probe or probe 1)
Ad2	End of defrost due to time-out
EA	External alarm
oPd	Open door alarm
To silence alarms press any key. Alarms are in absolute value or related to Setpoint (considered as the distance from the Setpoint itself) depending on Att parameter.	

INSTALLATION

The instrument is designed for panel mounting. Make a hole of 29x71 mm, insert the instrument and fix it using the brackets provided. Do not mount the instrument in humid and/or dirty places; it is suitable for use in ordinary polluted places. Ventilate the place in proximity to the instrument colling slits.

ELECTRICAL WIRING

Attention! Never work on electrical connections when the machine is switched on. The instrument is equipped with screw terminal boards for connection of electrical cables with a diameter of 2.5 mm² (one conductor only per terminal for power connections).

For the capacity of the terminals, see the label on the instrument.

The relay contacts are voltage free. Do not exceed the maximum current allowed; in case of higher loads, use an appropriate contactor. Make sure the power supply voltage complies with the one required by the instrument.

In 12V versions the power supply must be provided by a security transformer with the protection of a delayed 250 mA fuse. Probes have no connection polarity and can be extended using a regular bipolar cable (note that the extension of the probes affects the EMC electromagnetic compatibility of the instrument: pay extreme attention to wiring).

Probe cables, power supply cables and the TTL serial cables should be distant from power cables.

CONDITIONS OF USE

PERMITTED USE

For safety reasons the instrument must be installed and used according to the instruction provided and in particular, under normal conditions, parts bearing dangerous voltage levels must not be accessible.

The device must be adequately protected from water and dust as per the application and must also only be accessible via the use of tools (with the exception of the frontlet).

The device is ideally suited for use on household appliances and/or similar refrigeration equipment and has been tested with regard to the aspects concerning European reference standards on safety. It is classified as follows:

- according to its manufacture: as an automatic electronic control device to be incorporated by independent mounting;
- according to its automatic operating features: as a 1 B-type operated control type;
- as a Class A device in relation to the category and structure of the software

UNPERMITTED USE

Any other use other than that permitted is de facto prohibited. It should be noted that the relay contacts provided are of a practical type and therefore subject to fault. Any protection devices required by product standards or dictated by common sense due to obvious safety reasons should be applied externally.

LIABILITY AND RESIDUAL RISKS

Invensys Controls Italy S.r.l. shall not be liable for any damages deriving from:

- installation/use other than that prescribed and, in particular, that which does not comply with safety standards anticipated by regulations and/or those given herein;
- use on boards which do not guarantee adequate protection against electric shock, water or dust under the conditions of assembly applied;
- use on boards which allow access to dangerous parts without the use of tools;
- tampering with and/or alteration of the products;

TECHNICAL DATA IS 972 LX

Frontal panel protection: IP65.

Casing: plastic body in resin type PC+ABS UL94 V-0, inspection window in polycarbonate, buttons in thermoplastic resin.

Dimensions: frontal panel 74x32 mm, depth 30 mm.

Installation: on panel, with drilling template 71x29 mm (+0.2/-0.1 mm).

Use temperature: -5...55 °C.

Storage temperature: -30...85 °C.

Use environment humidity: 10...90 % RH (not condensing).

Storage environment humidity: 10...90% RH (not condensing).

Viewing range: -50...110 (NTC); -50...140 (PTC) °C without decimal point (selectable through parameter on 3 digit & 1/2 + mark display).

Analog inputs: two PTC or NTC inputs (programmable by parameter).

Digital input : 1 configurable low voltage digital input

Connections: telephone connector for the connection with EWEM 233 power module, screw connectors for digital input.

Serial: TTL for connection to Copy Card or Televis system.

Measuring range: from -50 to 140 °C.

Accuracy: 0.5% better than end scale + 1 digit.

Resolution: 1 or 0.1 °C.

Power Supply: from EWEM 233 module.

DISCLAIMER

This manual and its contents remain the sole property of Invensys Controls Italy s.r.l., and shall not be reproduced or distributed without authorization. Although great care has been exercised in the preparation of this document, Invensys Controls Italy s.r.l., its employees or its vendors, cannot accept any liability whatsoever connected with its use. Invensys Controls Italy s.r.l. reserves the right to make any changes or improvements without prior notice.

TECHNICAL DATA EWEM 233

Casing: plastic 4-Din module 70x85 mm (2.75x3.34").

Depth: 61 mm (2.40").

Mounting: Din-rail (Omega 3) or surface mounting.

Connections: telephone connector for the connection with IS 972 LX main module.

Use temperature: -5...50 °C.

Storage temperature: -30...75 °C.

Use environment humidity: 10...90 % RH (not condensing).

Storage environment humidity: 10...90% RH (not condensing).

Analog inputs: two NTC or PTC type (selectable by parameter configurable from display on IS 972 LX main module).

Digital outputs: 1 SPST output on 15(12)A

250V~ relay, 1 SPST output on 10(7)A

250V~ relay and 1 SPST output on 16(3)A

250V~ relays, configurable.

Power supply: 230 V~ ±10%.

Warning: check the power supply specified on the instrument label; for relay and power supply capacities, contact the Sales Office).

PLEASE NOTE: The technical data included in this document, related to measurement (range, accuracy, resolution, etc.) refer to the instrument itself, and not to its equipment such as, for example, sensors. This means, for example, that sensor(s) error(s) shall be added to the instrument's one.

Tab. 1 Parameter Table

PAR.	DESCRIPTION	RANGE	DEFAULT	VALUE*	LEVEL**	U.M.
COMPRESSOR REGULATOR (folder with "CP" label)						
diF	differential. Relay compressor tripping differential. The compressor stops on reaching the Setpoint value (as indicated by the adjustment probe), and restarts at temperature value equal to the Setpoint plus the value of the differential. Note: the value 0 cannot be assumed.	0.1...30.0	2.0		1	°C/°F
HSE	Higher SET. Maximum possible setpoint value.	LSE...302	99.0		1	°C/°F
LSE	Lower SET. Minimum possible setpoint value.	-55.0...HSE	-50.0		1	°C/°F
OSP	Offset Setpoint: temperature value to be added algebraically to the setpoint in the case of reduced set enabled (Economy function). It can be activated through digital input or by a key configured for such use.	-30.0...30.0	0		2	°C/°F
Cit	Compressor min on time. Minimum compressor activation time before any possible disabling. If set at 0 it is not active	0...250	0		2	min
CAt	Compressor mAx on time. Maximum compressor activation time before any possible disabling. If set at 0 it is not active	0...250	0		2	min
dOd	digital (input) Open door. Digital input user shut off. y = yes; n = no. Valid for parameter "H11" = ±4 (door switch).	n/y	n		2	flag
dAd	digital (input) Activation delay. Delay time of digital input activation.	0...255	0		2	min
COMPRESSOR PROTECTIVE DEVICE (folder with "CP" label)						
Ont	On time (compressor). Compressor activation time in the event of faulty probe. If set to "1" with Offt at "0" the compressor is always on, while at Offt >0 it functions always in duty cycle mode. see Duty Cycle diagram	0...250	0		1	min
Offt	OFF time (compressor). Compressor in disabled state time in the event of a faulty probe. If set to "1" with Ont at "0" the compressor is always off, while at Ont >0 it functions always in duty cycle mode. see Duty Cycle diagram	0...250	1		1	min
dOn	delay (at) On compressor. Delay time in activating the compressor relay after switch-on of instrument	0...250	0		1	sec
dOF	delay (after power) OFF. Delay after switch off; the indicated time must elapse between switch-off of the compressor relay and the successive switch-on.	0...250	0		1	min
dbi	delay between power-on. Delay between switch-ons; the indicated time must elapse between two successive switch-ons of the compressor.	0...250	0		1	min
OdO (!)	delay Output (from power) On. Delay time in activating the outputs after switch-on of the instrument or after a power failure.	0...250	0		1	min
DEFROSTING REGULATOR (folder with "dEF" label)						
dty	defrost type. Type of defrosting. 0 = electric defrost; 1 = reverse cycle defrost (hot gas); 2 = Free defrost (compressor hot).	0/1/2	0		1	num
dit	defrost interval time. Interval between the start of two successive defrosting operations. U.M. Hours (default) /min/sec depending on dt1 parameter	0...250	6h		1	hours (/min/sec)
dt1	defrost time 1. Measure unit for defrosting intervals ("dit" parameter). 0 = "dit" parameter in hours; 1 = "dit" parameter in minutes; 2 = "dit" parameter in seconds.	0/1/2	0		2	num
dt2	defrost time 2. Measure unit for defrosting duration ("dEt" parameter). 0 = "dEt" parameter in hours; 1 = "dEt" parameter in minutes; 2 = "dEt" parameter in seconds.	0/1/2	1		2	num
dCt	defrost Counting type. Selection of count mode for the defrosting interval. 0 = compressor operating hours (DIGIFROST® method); 1 = Real Time – appliance operating time; 2 = compressor stop.	0/1/2	1		1	num
dOH	defrost Offset Hour. Start-of-defrosting delay time from start up of instrument.	0...59	0		1	min
dEt	defrost Endurance time. Defrosting time-out; determines duration of defrosting. U.M. minutes (default) /hours/sec depending on dt2 parameter	1...250	30min		1	min
dSt	defrost Stop temperature. Defrost stop temperature (defined by the evaporator probe).	-50.0... 150	8.0		1	°C/°F
dPO	defrost (at) Power On. Determines if at the start-up the instrument must enter defrosting (if the temperature measured by the evaporator allows this operation). y = yes, starts defrost at start-up; n = no, doesn't start defrost.	n/y	n		1	flag
tcd	time compressor for defrost. Minimum time for compressor On or OFF before defrost. If >0 (positive value) the compressor will be ON for tcd minutes; If <0 (negative value) the compressor will be OFF for tcd minutes. If =0 parameter is disregarded	-31...31	0		2	min
Cod	Compressor off (before defrost). Time for compressor OFF in proximity of the defrost cycle. If a defrost cycle is set within the programmed time for this parameter, the compressor is not started up.	0...60	0		2	min
FAN REGULATOR (folder with "FAn" label)						
FPt	Fan Parameter type. "FSt" parameter mode. It can be displayed as temperature absolute value or as value related to Setpoint. 0 = absolute; 1 = relative.	0/1	0		2	flag
FSt	Fan Stop temperature. Fan lock temperature; if the value, read by the evaporator probe, is higher than the set value, fans stop.	-50.0..150.0	2.0		1	°C/°F
Fot	Fan on-start temperature. Fan starting temperature; if the temperature read by the evaporator is lower than the value set for this parameter, fans stay still.	-50.0..150.0	-50.0		1	°C/°F
FAd	Fan differential. Fan starting differential (see par. "FSt" and "Fot").	1.0...50.0	2.0		1	°C/°F
Fdt	Fan delay time. Delay time in activating fans after a defrost operation.	0...250	0		1	min
dt	drainage time. Dripping time.	0...250	0		1	min
dFd	defrost Fan disable. Allows to select the evaporator probes exclusion during defrost. y = yes; n = no.	n/y	y		1	flag
FCO	Fan Compressor OFF. Allows to select compressor fans lock OFF (switched off). y = fans activated (with thermostat; based on the value read by the defrost probe, see parameter "FSt"); n = fans off; dc = duty cycle (by parameters "Fon" and "FoF").	n/y/dc	y		1	num
Fod	Fan off (with opened) door. Fans activated with opened door. y = yes; n = no.	n/y	n		2	flag

PAR.	DESCRIPTION	RANGE	DEFAULT	VALUE*	LEVEL**	U.M.
FdC	Fan delay Compressor off. Fan stop delay time after compressor stop. In minutes. =0 function excluded	0.99	0		2	min
Fon	Fan oFF (in duty cycle). Fan OFF time due to duty cycle Fan use with duty cycle mode; valid for FCO = dc and H42=1	0.99	0		1	min
FoF	Fan oFF (in duty cycle). Fan OFF time due to duty cycle Fan use with duty cycle mode; valid for FCO = dc and H42=1	0.99	0		1	min
ALARMS (folder with "AL" label)						
Att	Alarm type. Parameter "HAL" and "LAL" modes, as temperature absolute values or as differential compared to the Setpoint. 0 = absolute value; 1 = relative value.	0/1	0		2	flag
AFd	Alarm Fan differential. Alarm differential.	1.0...50.0	2.0		1	°C/°F
HAL (5)	Higher ALarm. Maximum temperature alarm. Temperature value (absolute or related to Setpoint depending on Att parameter) which if exceeded in an upward direction triggers the activation of the alarm signal. See Max/Min. Alarm Diagram;	LAL...150.0	50.0		1	°C/°F
LAL (5)	Lower ALarm. Minimum temperature alarm. Temperature value(absolute or related to Setpoint depending on Att parameter), which if exceeded in a downward direction, triggers the activation of the alarm signal. See Max/Min. Alarm Diagram.	-50.0...HAL	-50.0		1	°C/°F
PAO (!)	Power-on Alarm Override. Alarm exclusion time after instrument switch on, after a power failure.	0...10	0		1	hours
dAO	defrost Alarm Override. Alarm exclusion time after defrost.	0.999	0		1	min
OAO	Output (door) Alarm Override. Delay time for temperature alarm signalling after disabling of digital input (or gate closure). Alarm is only for high-low temperature alarms.	0...10	0		2	hours
tdO	Time-out Door Open. Alarm signalling delay time for gate open.	0...250	0		2	min
tAO (6)	temperature Alarm Override. Temperature alarm signal delay time.	0...250	0		1	min
dAt	defrost Alarm time. Alarm for defrost end due to time-out. n = does not enable alarm; y = enables alarm.	n/y	n		2	flag
EAL	External Alarm Lock. External alarm for regulators stop. Allows the blocking of compressor, defrosting and fan regulators if the digital input (configured as external alarm) is activated. n = not block; y = block.	n/y	n		2	flag
AOP	Alarm Output Polarity. Polarity of alarm output. 0 = alarm activated and output disabled; 1 = alarm activated and output disabled.	0/1	1		2	flag
COMUNICATION (folder with label "Add")						
dEA (!)	dEvice Address. Device address: indicates the appliance address to the management protocol	0...14	0		1	num
FAA (!)	FAMily Address. Family address: indicates the appliance family to the management protocol	0...14	0		1	num
DISPLAY (folder with "dis" label)						
LOC	(keyboard) LOCK. Keyboard locking. However, you can enter parameter programming modify them along with the status of this parameter in order to allow keyboard locking. y = yes; n = no	n/y	n		1	flag
PA1	PASsword 1. When enabled (value other than 0) it constitutes the access key for level 1 parameters.	0...250	0		1	num
PA2***	PASsword 2. When enabled (value other than 0) it constitutes the access key for level 2 parameters.	0...255	0		2	num
ndt	number display type. View with decimal point. y = yes; n = no	n/y	n		1	flag
CA1	CAlibration 1.Calibration 1. Positive or negative temperature value added to the value read by probe 1, based on "CA" parameter settings.	-12.0...12.0	0		1	°C/°F
CA2	CAlibration 2.Calibration 2. Positive or negative temperature value added to the value read by probe 2, based on "CA" parameter settings.	-12.0...12.0	0		1	°C/°F
CA	CAlibration Intervention. Intervention on view offset, thermostat offset or both. 0 = modifies the temperature displayed only; 1 = adds to the temperature used by regulators, not to the temperature displayed, which stays unchanged. 2 = adds to the temperature displayed that is also used by regulators.	0/1/2	2		2	num
LdL	Low display Label. Minimum value the instrument is able to display.	-55.0...302	-55.0		2	°C/°F
HdL	High display Label. Maximum value the instrument is able to display.	-55.0...302	140.0		2	°C/°F
ddl	defrost display Lock. Viewing mode during defrosting. 0 = shows the temperature read by the thermostat probe; 1 = locks the reading on the temperature value read by thermostat probe when defrosting starts, and until the next time the Setpoint value is reached; 2 = displays the label "deF" during defrosting, and until the next time the Setpoint value is reached.	0/1/2	1		1	num
dro	display read-out. Select °C or °F for displaying the temperature read by the probe. 0 = °C, 1 = °F. PLEASE NOTE: the switch between °C and °F DO NOT modify setpoint, differential, etc. (for example set=10°C become 10°F).	0/1	0		1	flag
ddd	Selection of the value type to be shown on the display. 0 = Setpoint; 1 = probe 1; 2 = probe 2.	0/1/2	1		2	num
CONFIGURATION (folder with "CnF" label)						
H00(!)(1)	Probe type selection, PTC or NTC. 0 = PTC; 1 = NTC.	0/1	1		1	flag
H02	Time to enable keys, if these are configured for a specific function.	0...15	5		2	sec
H11 (2)	Configurability digital inputs/polarity. 0 = disabled; ± 1 = defrosting; ± 2 = reduced set; ± 3 = not used; ± 4 = door switch; ± 5 = external alarm.	-5...5	0		2	num
H21 (!)	Configurability digital output 1. (OUT 1) 0 = disabled; 1 = compressor; 2 = defrosting; 3 = fans; 4 = alarm; 5 = optional.	0...5	1		2	num
H22 (!)	Configurability digital output 2. (OUT 3) Same as H21.	0...5	3		2	num
H23 (!)	Configurability digital output 3. (OUT 2) Same as H21	0...5	2		2	num

PAR.	DESCRIPTION	RANGE	DEFAULT	VALUE*	LEVEL**	U.M.
H25(!)(3)	Configurability buzzer output. Same as H21.	0...5	4		2	num
H31 (!)	Configurability UP key 0 = disabled; 1 = defrosting; 2 = optional; 3 = reduced set (economy).	0...3	1		2	num
H32 (!)	Configurability DOWN key 0 = disabled; 1 = defrosting; 2 = optional; 3 = reduced set (economy).	0...3	0		2	num
H33 (!)	Configurability FNC key 0 = disabled; 1 = defrosting; 2 = optional; 3 = reduced set (economy).	0...3	0		2	num
H41	Regulating probe present.	n/y	y		2	flag
H42	Evaporator probe present.	n/y	y		1	flag
rEL	release firmware. Device version: read only parameter.	/	/		1	/
tAb	tAble of parameters. Reserved: read only parameter.	/	/		1	/

label PA2

Inside CnF folder it is possible to reach all level 2 parameters from label PA2 by pressing the "set" button
SEE 2) level 2 Parameters paragraph

UL COPY CARD (folder with "Fpr" label)

dL	Up load. Programming parameter transfer from instrument to Copy Card.	/	/		1	/
Fr	Down load. Programming parameter transfer from Copy Card to instrument Format. Erasing all data in the copy card.	/	/		2	/

PLEASE NOTE: using "Fr" parameter (copy card formatting) the data within the copy card will be lost permanently. The operation cannot be cancelled.

- (1) The default value is 1 (NTC input, see the label on the instrument).
- (2) WARNING! positive or negative values change polarity; Positive values: active input for on contact; negative values: active input for off contact.
- (3) Parameter visible in models with optional buzzer.
- (5) If Alarms are relative to the Setpoint, HAL should be set to positive values and LAL to negative values
- (6) referred exclusively to high/low temperature alarms

* VALUE column: to be filled manually, with customized settings (if different from the default value).

** LEVEL column: indicates the level of visibility of parameters accessible by PASSWORD (see the related paragraph)

*** PA2 is visible (it will be required, if necessary) at level 1 and can be set (editable) at level 2

(!) WARNING!

- If one or more of these parameters highlighted with (!) are modified, the controller must be switched off and switched on again to ensure correct operation.
- It is strongly recommended, anyway to switch off and switch on again the controller anytime parameters have been changed to prevent malfunctioning on configuration and/or ongoing timings.

Max/Min. Alarms Diagram (Maximum and Minimum Temperature Alarms)

The maximum alarm will become when the probe temperature will be:


- (1) higher or equal to HAL if Att=Abs(olute)
- (2) higher or equal set + HAL if Att=rEL(ative)

- if Att=Abs(olute) HAL should be with sign;
- if Att=rEL(ative) HAL should be only positive

The minimum alarm will become when the probe temperature will be:

- (1) lower or equal to LAL if Att=Ab(solute)
- (2) lower or equal to set + LAL if Att=rEL(ative)

- if Att=Ab(solute) LAL should be with sign;
- if Att=rEL(ative) LAL should be only positive

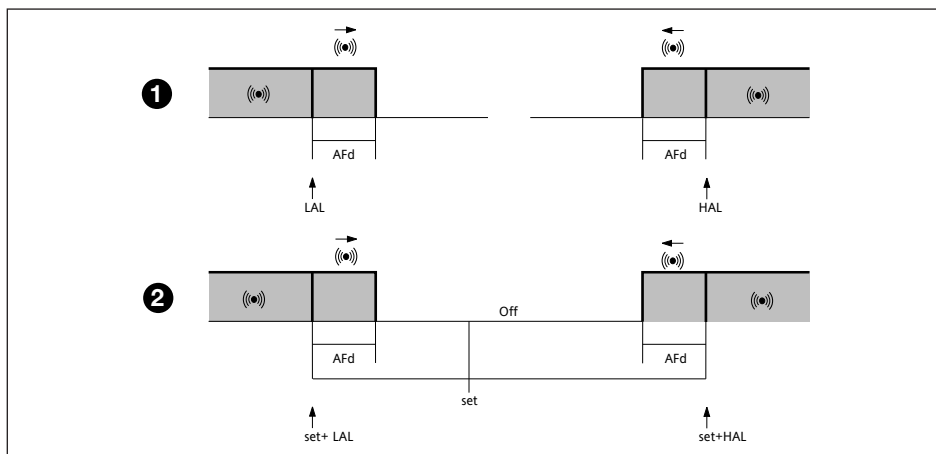

The maximum alarm will ends when the probe temperature will be:

- (1) lower or equal to HAL - AFd if Att=Abs(olute)
- (2) lower or equal to set + HAL - AFd if Att=rEL(ative)

The minimum alarm will ends when the probe temperature will be:

- (1) higher or equal a LAL + AFd if Att=Abs(olute)
- (2) higher or equal a set + LAL + AFd if Att=rEL(ative)


Duty Cycle Diagram

Ont, OFt parameters programmed for Duty Cycle

Ont	OFt	Output compressor
0	0	OFF
0	>0	OFF
>0	0	ON
>0	>0	dc

When the sensor detects an error condition:


- the code E1 is displayed
- the regulator is activated as indicated by the "Ont" and "OFt" parameters if programmed for the duty cycle or:

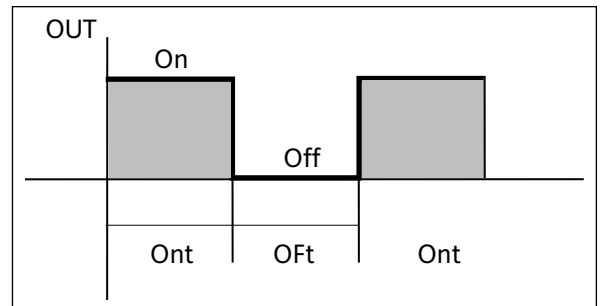


Programming Menu Diagram

PARAMETERS

Level 1 folders	Level 2 folders
CP	CP
dEF	dEF
FAn	FAn
AL	AL
Add	Add
diS	diS
CnF	CnF
FPr	FPr

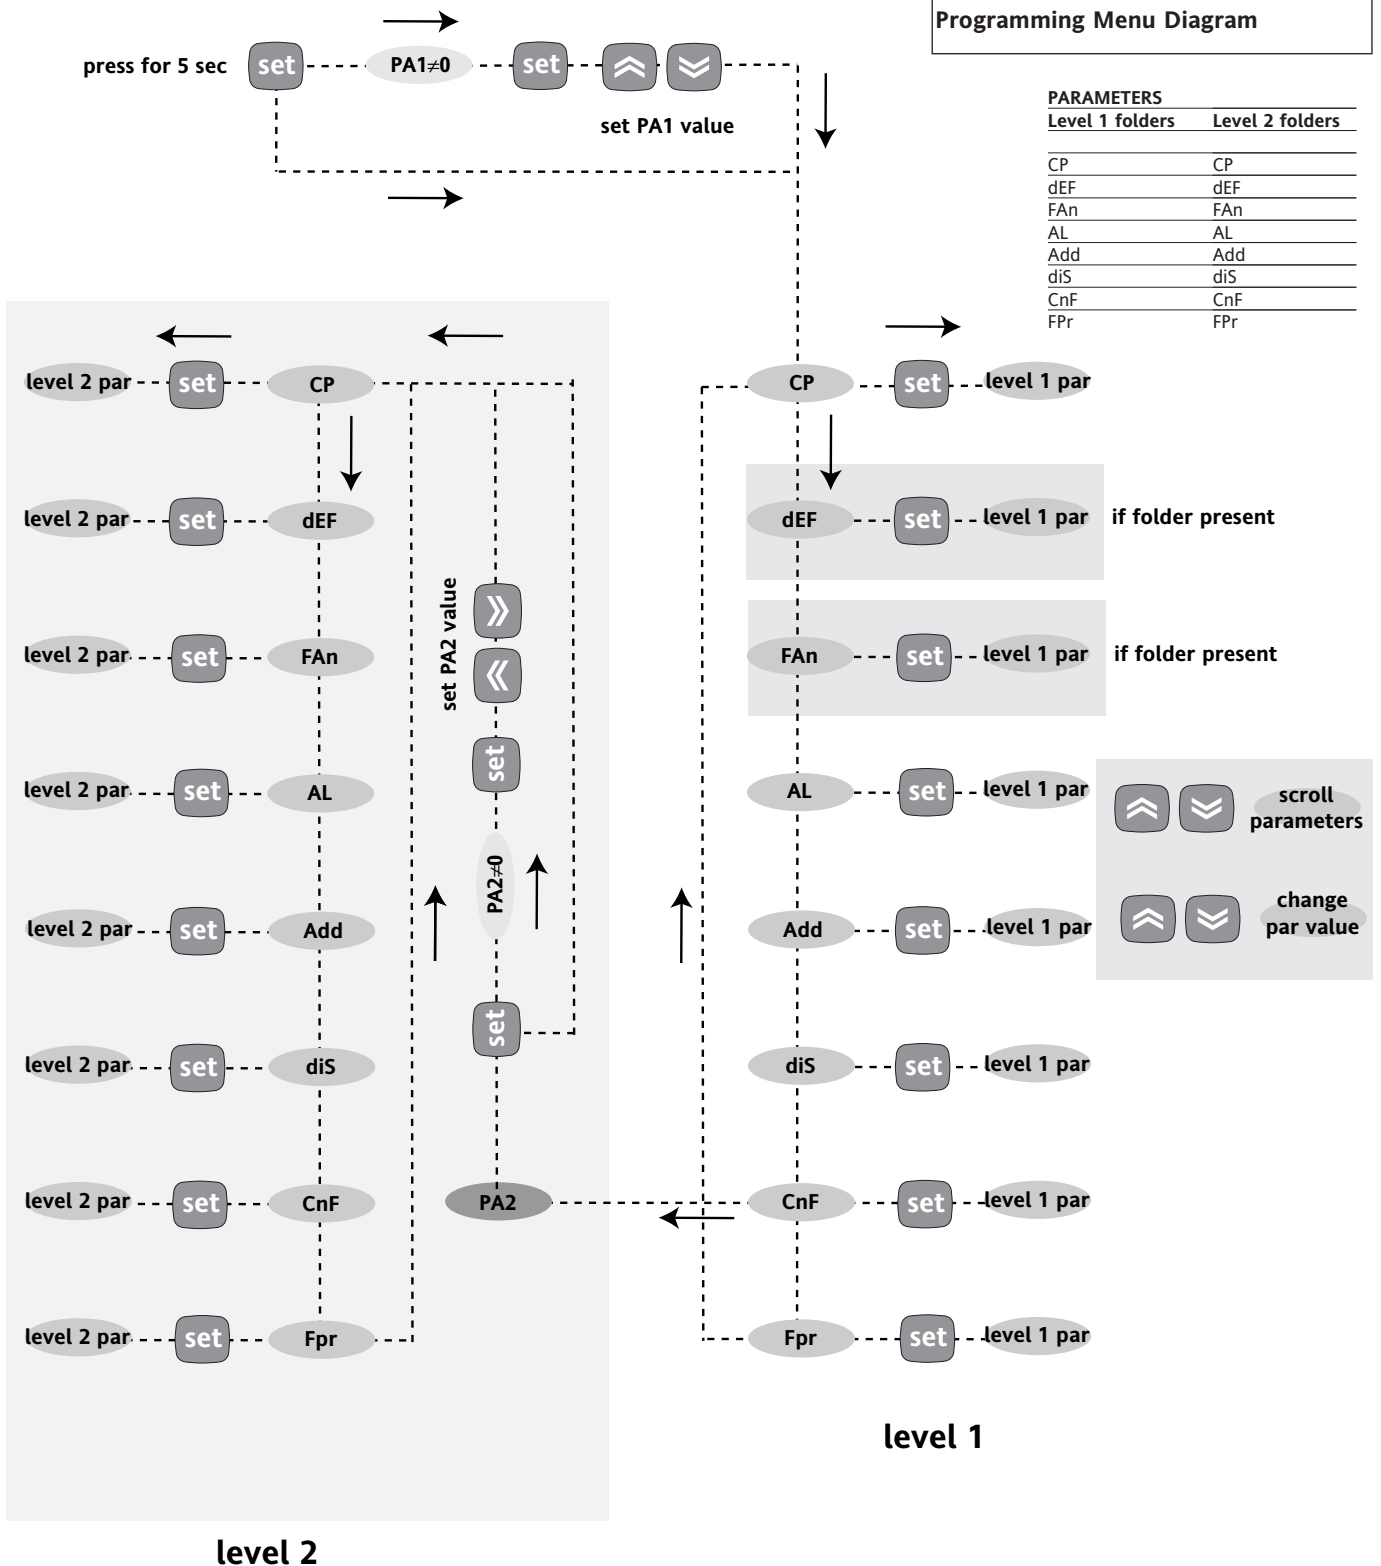


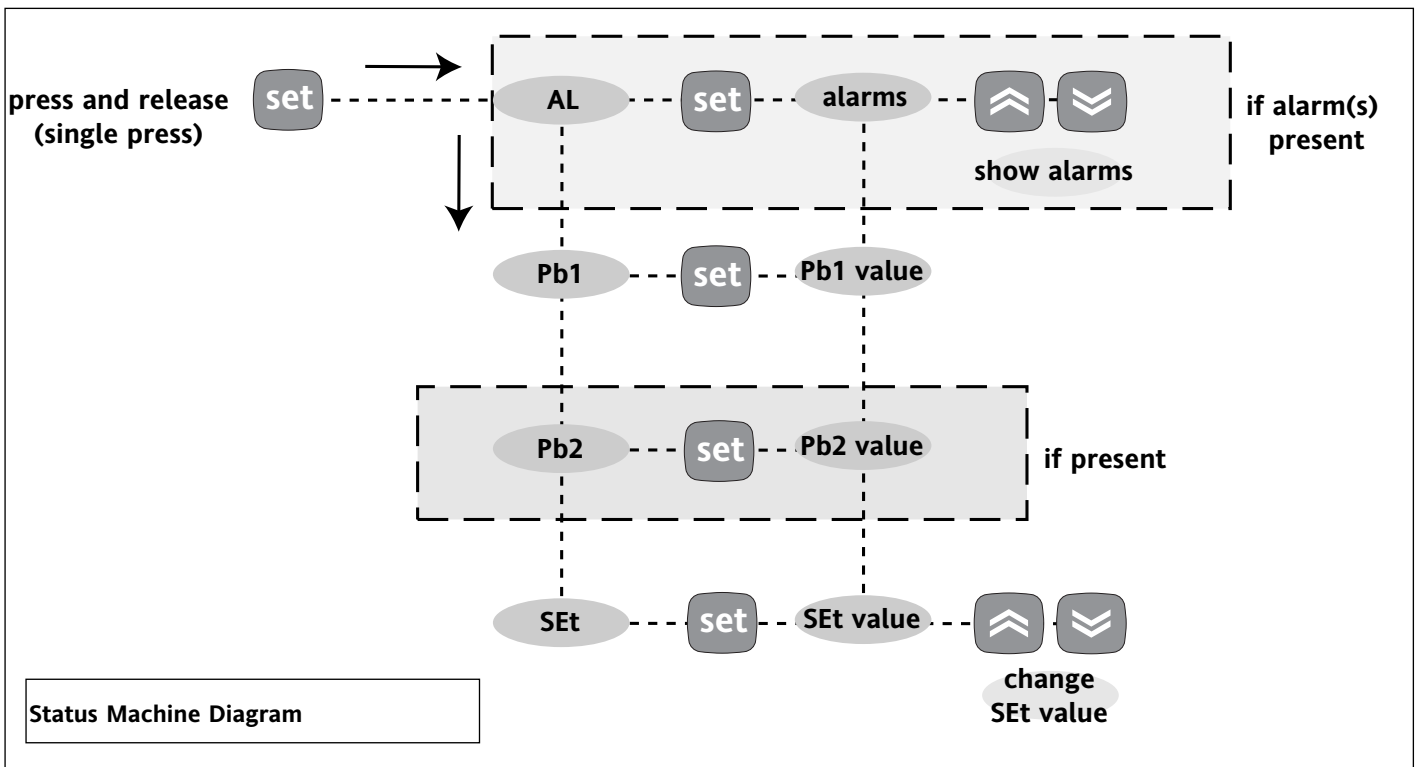

Wiring diagram


WIRING IS 972 LX

3 - 4	Digital input
A	TTL input for Copy Card and connection to TelevisSystem
B	connection IS 972 LX-EWEM 233

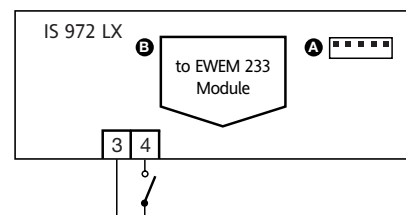

WIRING EWEM 233

1 - 2	output relay 2 (OUT 3)
4 - 5 - 6	output relay 3 (OUT 2)
11 - 12	Power Supply 230V
16	Probe 1 input (thermostat)
17	Probe 2 input (evaporator)
18	common analogue (probes) inputs
22 - 24	output relay 1 (OUT 1)
B	connection IS 972 LX-EWEM 233
C	RS-485 supply (not used)

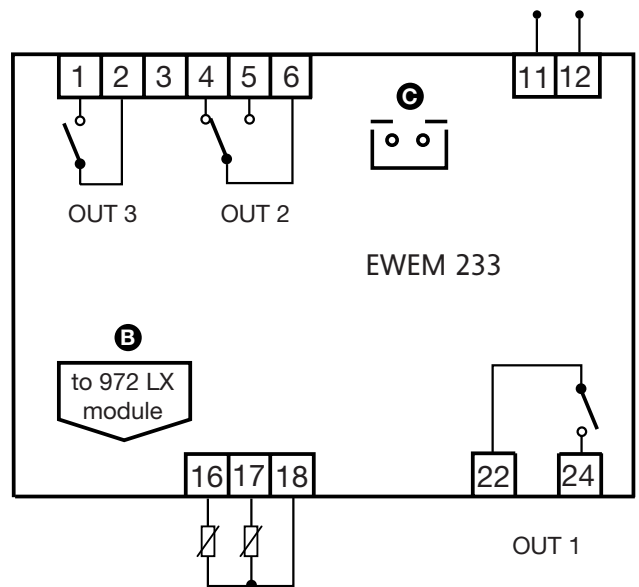

NOTE: Default user settings



Invensys Controls Italy s.r.l
 via dell'Industria, 15 Zona Industriale Paludi
 32010 Pieve d'Alpago (BL) ITALY
 Telephone +39 0437 986111
 Facsimile +39 0437 989066
 Internet <http://www.climate-eu.invensys.com>

1/2003 eng
 cod. 9IS22051b